


UNION PACIFIC DOME-OBS

PARTS KATO Dome Coach; BRASS CAR SIDE # 536 OBS OR # 526 MOD-TRAIN LOUNGE, KATO # 805054(2) SMOOTHSIDE DIVER WINDOW SET; # 805057 SMOOTHSIDE OBS WINDOW SET (FOR MARKER LITES ONLY) PONT NEED FOR LOUNGE GUITAR STRING .010 (FOR HANDRAILS)

Remove VESTIBULE END WALL & REPLACE W/DIAGRAM

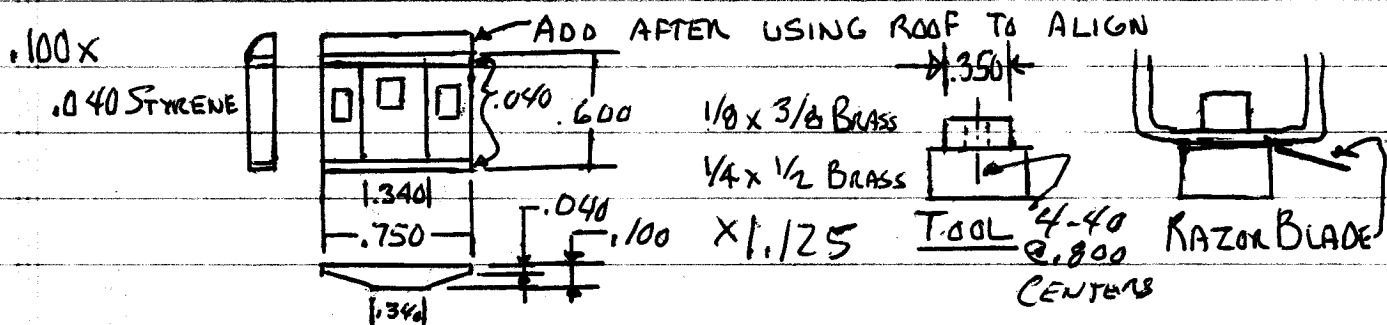

AFTER YOU HAVE CONSTRUCTED THIS END CAP SAND THE BACK SIDE FOR FLAT FIT TO END & ROUND THE CORNERS.

BEND THE BRASS END USING TOOL ~~BAR~~ ABOVE. DRILL & TAP 1/4" BAR FOR 4-40. MAKE CLEAN HOLE IN 1/8 BAR THAT HAS BEEN MACHINE TO .350 WIDTH, THIS ALSO GIVES YOU AN SHAPED EDGE FOR BENDING. PLACE BRASS END UNDER 1/8 BAR & TIGHTEN USE WIDE FLAT CHISEL X-ACTO BLADE AT WINDOW FIRST AS THIS SMALL PIECE DOES NOT WANT TO BEND

PLACE SHAPED BRASS CAR SIDE OVER KATO BODY AND USING MASKING TAPE PULL SIDES FLUSH WITH FLAT END I USE SUPER GLUE THRU WINDOWS FROM THE INSIDE AT BRASS TO START SECURING SIDES. THEN REMOVE TAPE AND SECURE ENDS.

PUT ROOF ON AND GLUE TOP ON OBS END PUSHING ROOF TIGHT AGAINST OTHER ~~END~~ (FLAT) END. SHAPE TOP